

MOUNTING INSTRUCTIONS (Dispenser Must be Mounted Level)

The user is responsible for the proper installation and use of this dispenser.

Equipment Needed: Measuring Tape, Level, Screwdriver, Eye Protection, Pencil, Drill and Drill Bit, Appropriate Mounting Fasteners.

1. Position the unit on wall with front cover open. Use a pencil to mark mounting locations through the holes on the back of the unit. Make sure unit is level before marking holes.

WARNING: Proper function of this dispenser requires level mounting. Use mounting holes closest to the outer edges for best results.

2. Drill the marked spots on the wall with an appropriate sized drill bit for the wall material and mounting hardware.
3. To complete the installation, use mounting hardware appropriate for the wall on which the dispenser will be mounted. A flat washer should be used between the head of the fastener and the inside of the dispenser.

BATTERY LOADING

This unit is powered by four “D” Cell alkaline batteries. **WARNING: Do not use rechargeable NiCad batteries as these may cause damage to your dispenser or cause personal injury.** A flashing red indicator light indicates that the batteries need to be replaced.

Take care to load batteries in correct orientation with the negative end facing up at the bottom left and at the top right. Place the other two batteries with the positive end facing up at the top left and bottom right locations. Look at *Figure 1:1* for orientation with the unit.

Figure 1:1



LOADING SOAP INTO THE DISPENSER

1. Open cover and remove the nozzle lock from its location
2. Place full bag at the top of bag holder with the nozzle end through the slot in the bag holder

3. Slide full bag down bag holder and place nozzle retaining plate in the retaining plate brackets
4. Make sure the return tip is placed at the “TOP” of the actuation slide. Failure to do this will cause the soap dispenser to malfunction.
5. Replace the nozzle lock over the retaining plate and retaining brackets
6. Remove appropriate Foam Soap Decals that matches type of foaming soap installed in unit.
7. Apply the sticky surface to the inside of the sight window. See *Figure 1.2*

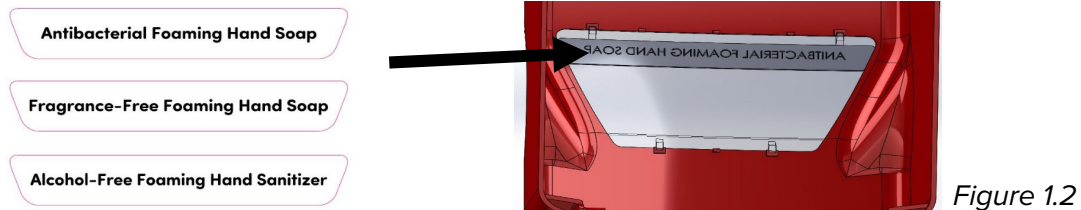


Figure 1.2

8. Close cover and lock into place

USING THE DISPENSER

Once the new bag has been loaded, close the dispenser cover. The unit is ready to use. Hold hand under the soap dispenser for soap to be dispensed.


TROUBLESHOOTING

Most issues can be corrected by opening and closing the front cover. If this doesn't solve the issue, try removing and reinserting the batteries, or replace with new batteries. If problems persist, contact RedDot Brands at 844.788.9564 or support@reddotbrands.com.


Replacement Parts




Sight Window (9451)

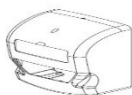


Front Cover (9450)

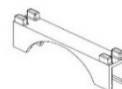

Nozzle Lock (9448)

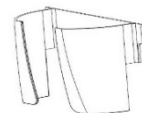


Bag Holder (9447)

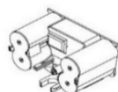

Mech Assembly (9446)



Lock Finger (9404)

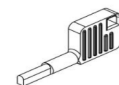

Key (3523)

RedDot Brands
support@reddotbrands.com
 844.788.9564