



## AUTOMATED HANDS-FREE ROLL TOWEL DISPENSER WITH 7" LCD SCREEN INSTRUCTIONS

### MOUNTING INSTRUCTIONS

The user is responsible for proper installation and use of this dispenser. For best results, mount the dispenser level and on a flat surface.

**Equipment Needed:** Measuring Tape, Level, Screwdriver, Eye Protection, Pencil, Drill and Drill Bit, Appropriate Mounting Fasteners

1. Position the unit on wall with front cover open. Use a pencil to mark mounting locations through the holes on the back of the unit. Make sure unit is level before marking holes.

**WARNING: Proper function of this dispenser requires level mounting.** Use mounting holes closest to the outer edges for best results.

2. Drill the marked spots on the wall with an appropriate sized drill bit for the wall material and mounting hardware.
3. To complete the installation, use mounting hardware appropriate for the wall on which the dispenser will be mounted. A flat washer should be used between the head of the fastener and the inside of the dispenser.

### CONNECTING POWER TO THE UNIT

The unit requires 12VDC power connected to the DC jack, found in the bottom rear of the unit. The customer can choose to power the unit by using the included 12VDC wall adaptor, or by using a transformer (not included) and the included DC jack w/ "pigtail" wires. **WARNING: Please consult a licensed contractor to insure proper installation of any electrical system used to power this unit.** Once the unit is powered, follow the instructions on the LCD screen for loading a video onto the unit.

### PAPER LOADING


1. Open cover and place paper roll onto roll holders
2. Orientate so that paper is hanging off the front of the roll
3. Pinch paper between two rollers by manually rotating the front roller
4. Close the front cover and dispenser will feed the first sheet and is ready for use

## USING THE DISPENSER

Once paper is loaded, close the dispenser cover and towel will be dispensed. Unit is ready for use.

## ADJUSTING SETTINGS

Inside the front cover, there are four switches that allow the user to adjust the settings on the dispenser.

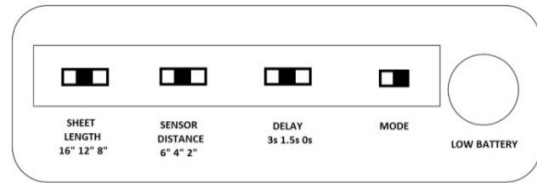

**Sheet Length:** The user can adjust from three different sheet length settings starting with 16" being the selection furthest left, 12" setting in the middle and 8" setting on the far right.

**Sensor Distance:** The user can adjust from three different sensor distances starting with 6" being the selection furthest left, 4" setting in the middle and 2" setting on the far right.

**Delay:** The user can adjust from three different delay settings starting with 3 seconds being the selection furthest left, 1.5 seconds in the middle and 0 seconds on the far right.

**Mode:** The user can adjust from two different operating modes. The left selection will set the unit to **Sensor Mode**. The right selection will set the unit to **Exposed Sheet Mode**.

**Sensor Mode** – After closing the front cover, one sheet of paper will automatically dispense. Once the initial sheet is torn, the dispenser will be in "sensor mode", waiting for a hand to be held in front of the sensor to dispense the next sheet. (NOTE: Unit will not dispense the next sheet until the previous sheet is torn away from unit)

**Exposed Sheet Mode** – After closing the front cover, one sheet will automatically dispense. Once the sheet is torn, the next sheet of paper will automatically dispense.

## TROUBLESHOOTING

Most problems can be corrected by opening and closing the front cover. If that does not resolve the issue, try removing and reinserting the batteries or A/C adapter, or try replacing with new batteries. If problems persist, contact RedDot Brands at 844.788.9564 or [support@reddotbrands.com](mailto:support@reddotbrands.com).

## Replacement Parts



Front Cover (9864)



Modular Housing (9501)



Lock Finger (9817)



Roll Holders (9814-7)



Key (3523)



12VDC Power Adapter (9503)



Pigtail Wire DC Plug (9502)



LCD Cover/Seal (9511)



LCD Screen (9510)

RedDot Brands  
[support@reddotbrands.com](mailto:support@reddotbrands.com)  
844.788.9564