



MECHANICAL FOAMING SKIN CARE DISPENSER INSTRUCTIONS

MOUNTING INSTRUCTIONS (Dispenser Must be Mounted Level)

The user is responsible for the proper installation and use of this dispenser.

Equipment needed:

Measuring Tape

Level

Screwdriver

Eye Protection

Pencil

Drill and Drill Bit

Assemble appropriate fasteners (screws, bolts, anchors, washers, etc.) for mounting.

1. Position the unit on wall with front cover open. Use a pencil to mark mounting locations through the holes on the back of the unit. Make sure unit is level before marking holes.

WARNING: Proper function of this dispenser requires level mounting. Use mounting holes closest to the outer edges for best results.

2. Drill the marked spots on the wall with an appropriate sized drill bit for the wall material and mounting hardware.
3. To complete the installation, use mounting hardware appropriate for the wall on which the dispenser will be mounted. A flat washer should be used between the head of the fastener and the inside of the dispenser.

LOADING SOAP INTO THE DISPENSER

1. Fully open the front cover
2. Place full bag at the top of the bag holder with the nozzle end through the slot in the bag holder
3. Slide full bag down the bag holder and place nozzle retaining plate in the retaining plate brackets at front of bag holder
4. Remove appropriate Foam Soap Decals that match the type of foaming soap installed in the unit.

Antibacterial Foaming Hand Soap

Fragrance-Free Foaming Hand Soap

Alcohol-Free Foaming Hand Sanitizer

5. Apply the sticky surface to the inside of the sight window. See *Fig. 1.01*
6. When decal is attached, close the front cover and the unit is ready to operate.



Fig. 1.01

 
USING THE DISPENSER

Once the new bag has been loaded, close the dispenser cover. The unit is ready to use. Press the lever for soap to be dispensed.

TROUBLESHOOTING

Most issues can be corrected by opening and closing the front cover. If this doesn't solve the issue, try removing and reinserting the batteries, or replace with new batteries. If problems persist, contact RedDot Brands at 844.788.9564 or support@reddotbrands.com.


Replacement Parts

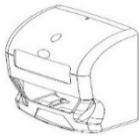


Front Cover (9306)



 Spring (9307)




Mech Lever (9305)

 


Bag Holder (9304)



 Sight Window (9451)



Lock Finger (9404)

 

Key (3523)

RedDot Brands
support@reddotbrands.com
844.788.9564

9301 REV C