

MOUNTING INSTRUCTIONS

The user is responsible for proper installation and use of this dispenser. For best results, mount the dispenser on a flat, clean surface, and in a location with good air movement. Restroom doors or walls adjacent to air vents are ideal locations for the dispenser. The user can choose between two mounting methods listed below.

Adhesive Pad Mounting

Equipment Needed: Measuring Tape, Level

1. Clean and dry a flat mounting surface.
2. Remove protective backing from adhesive pad on rear of the Passive Air Care Dispenser.
3. To complete installation, ensure dispenser is level and firmly press against mounting surface.


Hardware Mounting

Equipment Needed: Measuring Tape, Level, Screwdriver, Eye Protection, Pencil, Drill and Drill Bit, Appropriate Mounting Fasteners

1. Position the Passive Air Care Dispenser on a flat mounting surface with the cover open.
2. Use a pencil to mark mounting locations through the holes on the back of the dispenser. Make sure unit is level before marking holes.
3. Drill the marked spots with an appropriate sized drill bit for the wall material and mounting hardware.
4. To complete the installation, use mounting hardware appropriate for the surface on which the dispenser will be mounted. A flat washer should be used between the head of the fastener and the inside of the dispenser

BATTERY LOADING


Remove the battery cover by sliding from left to right. Take care to load batteries in correct orientation as shown below. The unit is powered by two "A" Cell alkaline batteries. **WARNING: Do not use rechargeable or NiCad batteries as these may cause damage to your dispenser or cause personal injury.** A battery level indicator found on the front LCD screen of the dispenser will indicate when the batteries need to be replaced.

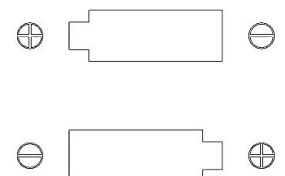

PASSIVE AIR CARE CARTRIDGE LOADING

1. Use the provided Key to open the front cover.
2. Orient the Passive Air Care Cartridge over guide and retaining features on the dispenser as shown.
3. Press the timer reset button located on the inside of the front cover.
4. Close the front cover.

NOTE: Passive Air Care Deodorizer Cartridge can also be used as a highly fragranced urinal screen

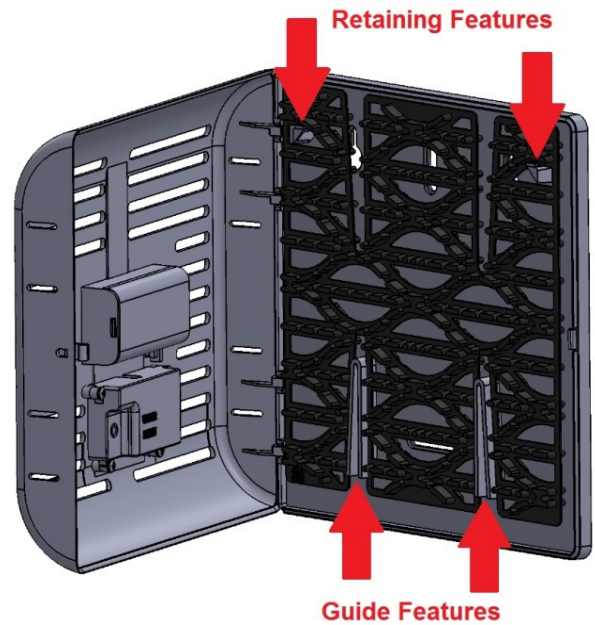


USING THE DISPENSER

Once the Passive Air Care Cartridge is loaded the dispenser is ready for use. The LCD screen on the front of the Passive Air Care Dispenser will display the number of effective days remaining for that cartridge, as well as the remaining battery life.


TROUBLESHOOTING

Most problems can be corrected by opening the dispenser and re-loading the cartridge. If problems persist, contact RedDot Brands at 844.788.9564 or support@reddotbrands.com.

Replacement Parts

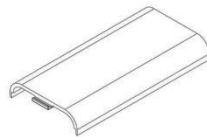

Battery Cover (9206)

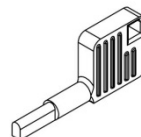

Key (3523)

RedDot Brands
support@reddotbrands.com
844.788.9564